



# Sound Configuration for Windows 7 and Vista Platforms


1. Click on the <Start> menu and select the <Control Panel>

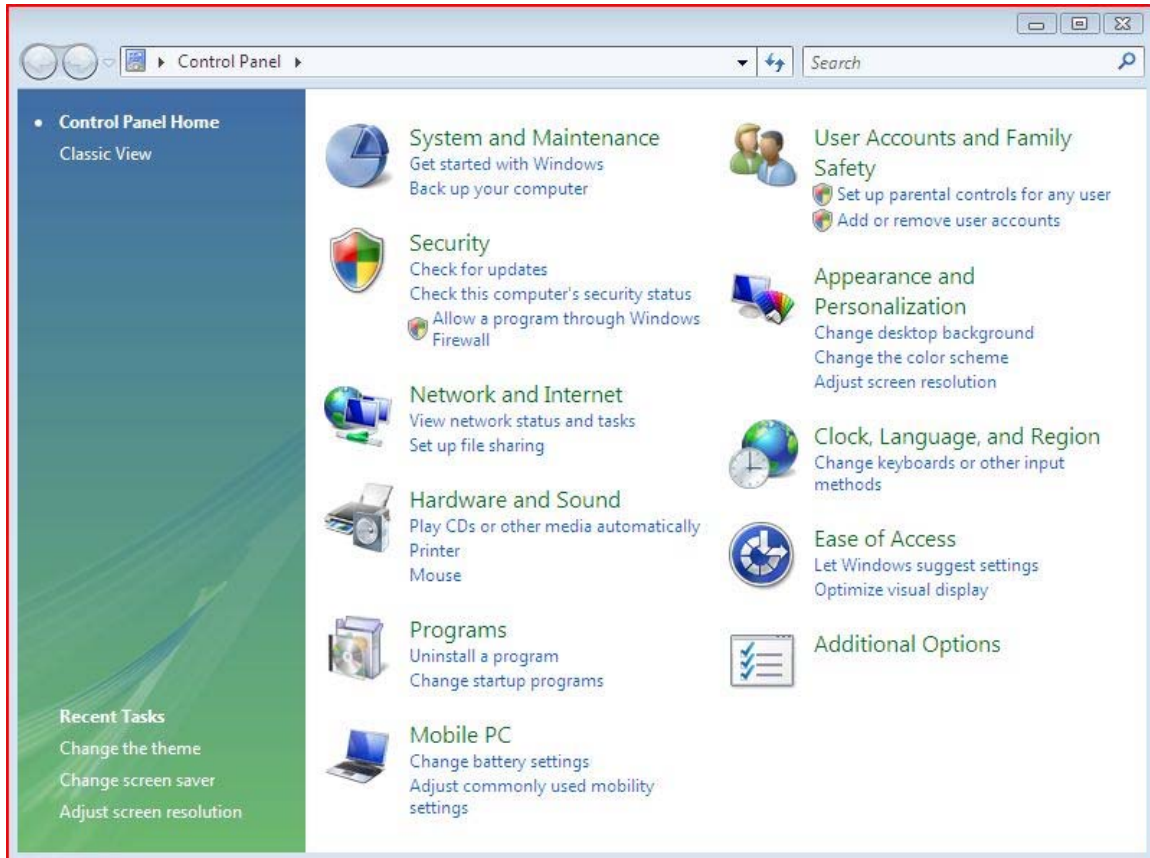

## 2. Select <Hardware and Sound>

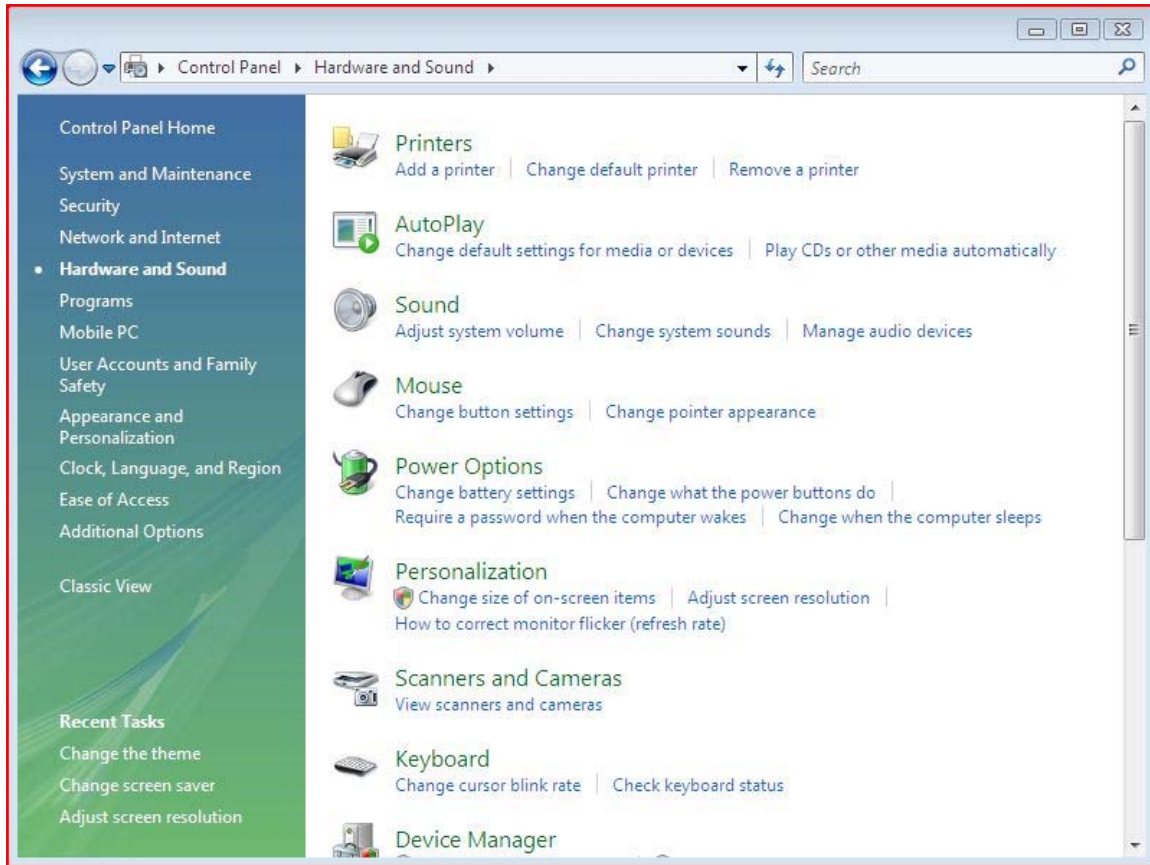


### 3. Select <Sound>

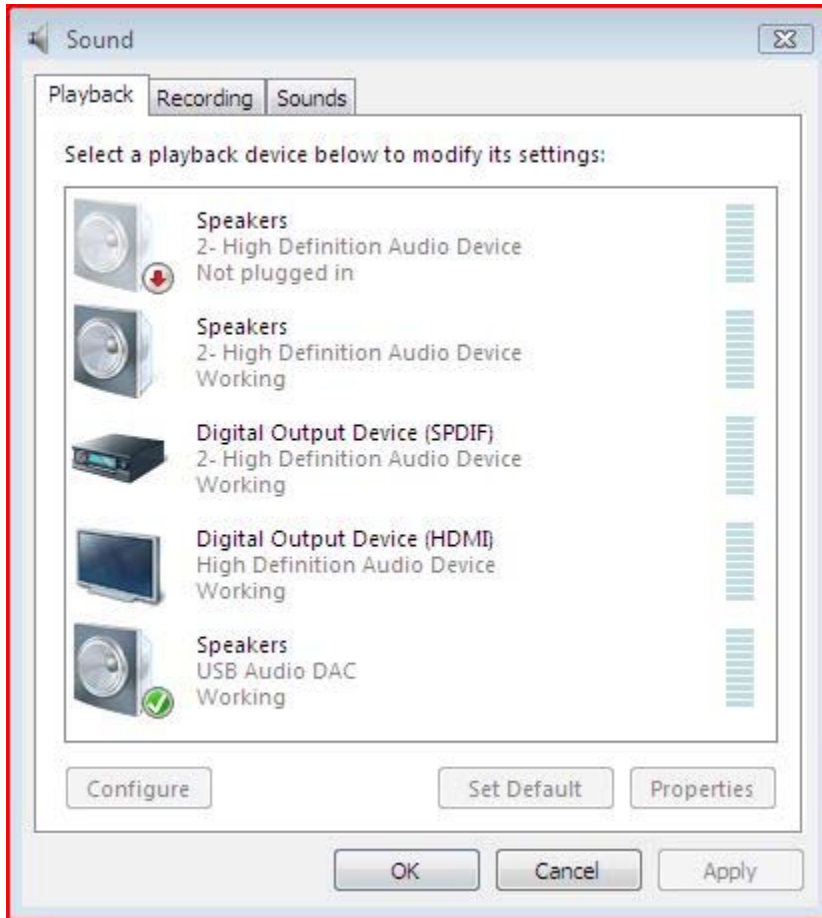


4. Select the <Playback> tab and confirm that the <USB Audio DAC> or <USB Audio Device> box is checked. If not, check either one.

5. Click the <Property> button

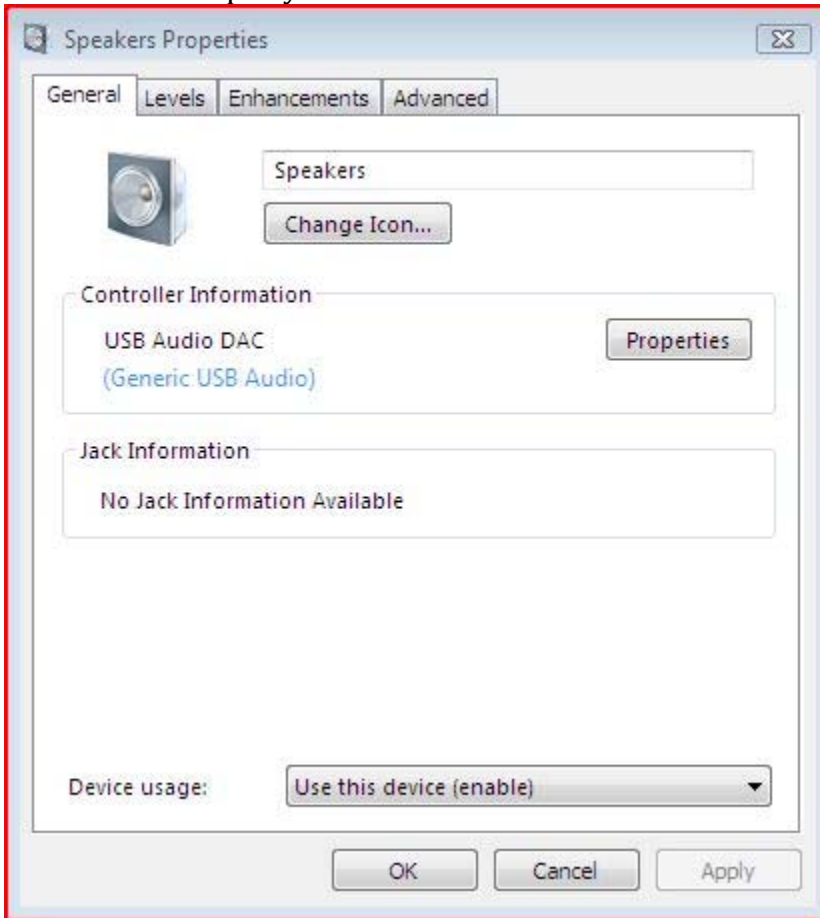

6. Click the <Level> tab to adjust the volume and check to confirm that the <Speaker Mark> is not set to

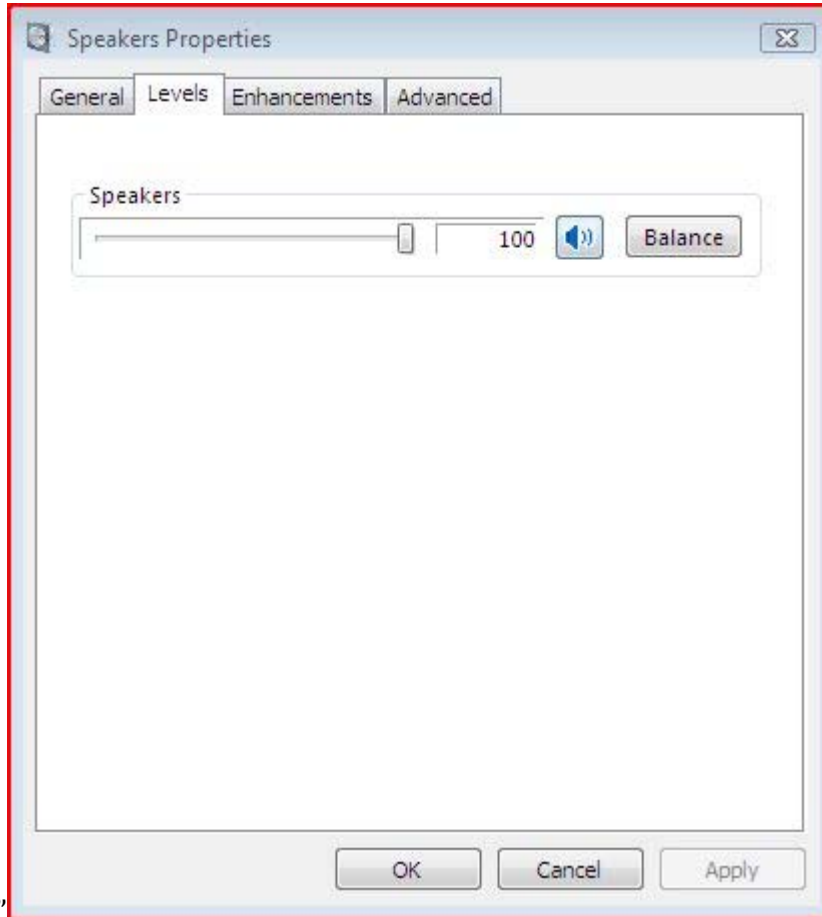

“Mute”

7. Select <Balance> to adjust volume balance between the left and right speakers

